


**Content:**

- 1x Podoblock Aluminium
- 1x Topblock
- 1x Hexagonal wrench
- 2x Screw

Follow the steps below:

- Place Topblock into aluminium Podoblock holder. See picture.
- Turn Podoblock and fasten screws hand-tight.
- Your Podoblock is ready to use!

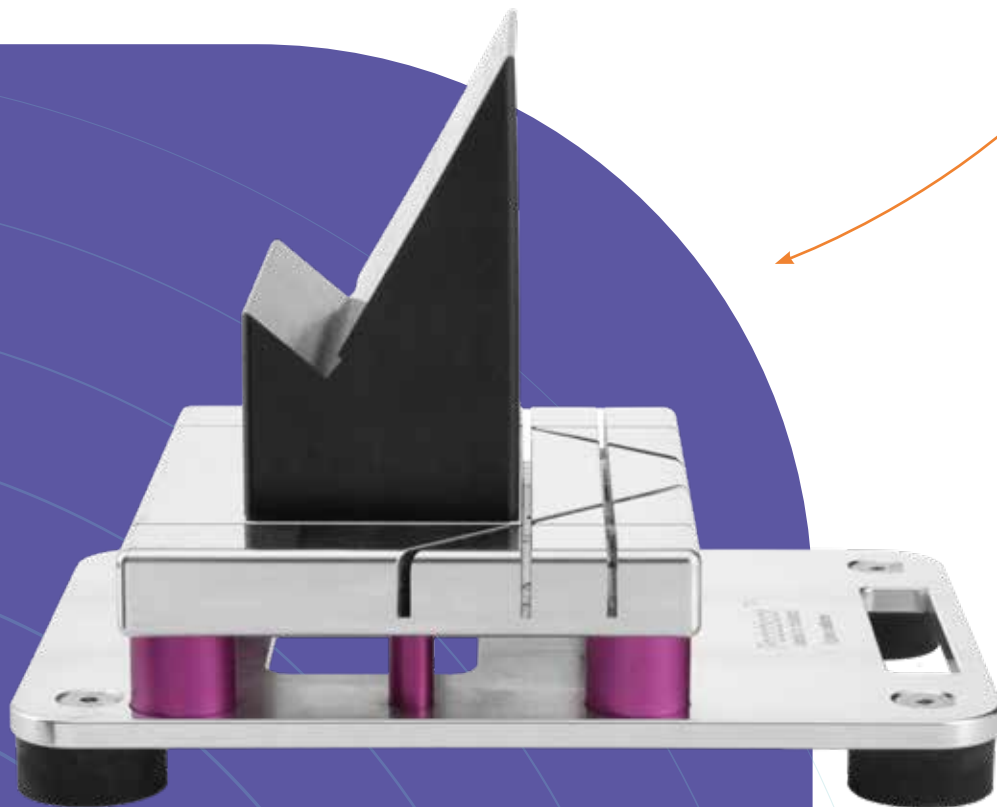

MOUNTING INSTRUCTIONS

Podoblock

Verlengde Nijverheidsweg 10

9482 WT Tynaarlo

The Netherlands

+31 50 8200 257

info@podoblock.com

podoblock.com